



POWERMONKEY ADAPTORS/TIPS COMPATIBILITY CHART

ORDER ONLINE from www.eWallis.com

email: info@ewallis.com

BRAND	TIPS	COMPATIBLE
Acer	N35	Acer N30/N35 /Navman Pin570
		Fuji FinePix F10 /Z2
Blackberry	6710	BLACKBERRY 6710/6720/7270/7730/7750/XDA Iii
Blackberry	Solar	Compatiable V3 and Support Solarmonkey (Solar Slave)
AU/CDMA		
DC Output Plug	DC2.0	Nokia N70/N71/N72/N73/N75/N80/N90/N91/N92/N93
		CANON Powershot A300, Fuji Powershot A310
	DC2.3	Konica Revio KD-3300
	DC2.5	Motorola C290 /i500, BenQ-Simense Bluetooth, Motorola Bluetooth HB610
		UTStarcom CDM120 /7025 /7075 /8460 /8625 /8920 /8932 /Slice PCS1400VM / PPC6700 / VI600
		PalmOne Tungsten E /Zire 31 /Zire 72
		VK Mobile Helio VK650C, Helio Kickflip
		LG C810 /PM225
		iAudio X5 Gamin nuvi iQue 3200/3600
	DC3.0	SAMSUNG SPH-A660/A760/MM-A700/A880/A920/VGA-1000/VM-A680 /WEP-200 /IVI-660 /N240/N270/N400
		Motorola C115/C116/C117/C118/C136/C137/C139/C155/C168/C193/C195/C200/C201/C202/C205/C257/C261
		Motorla W220 /V180
	DC3.5x1.1	Nokia Full Series
		Samsung Camera: Digimax U-CA3/V3/V4/350SE/230/340/370/410/301/CYBER3, ViVi 2800

	DC3.5 x 1.3	
	DC4.0	Creative MuVo 2/MuVo2 FM/Zen/Zen PMC/Zen Sleek/Zen Touch/Zen Vision,SONY PSP/Canon 750 + V3
		RICOH Digital Camera: PR1/PR10/PR120/RDC-2/RDC-2E/300/300E/4200/4300/5000/5300/6000/7/i500/i700
		Archos series Media Player
		Olympus U-10D/D-15D/D-20D/D-25D/D-30D/D-300D/D-400D/D-410D/X-1/X-2/X-3/AZ-1/C-50Z/C-60Z
		OLYMPUS C-310/U300/C-5060
		NIKON EX-230/EX240
		Toshiba Gigabeat MEG F10K/10L/10S/20S/20K/40S/60S/ MES30VK/30VW/60VK/ ME30VK
		CASIO EX-Z40/S3/S3000/S5000/EX-230/EX240
		CANON A620/A610/A95/A80/A85/A60/A70 /A75
		KODAK V530/V803/DX6490/CX6200/DX7630/DX7440/LS743/LS443/LS663/CX7430;
		PANASONIC LC50/LC70/FZ10/LC1/AV25/AV50/LC33/LC43
		Fuji FinePix S9500/S7000/S5500/S5600/S5000/S6500/S30000/S602/S304/S20pro/AS10/AV50/LC33/LC43
		Fuji FinePix F460/F450/F440/F410/F401/F11/F10/Z2Z1/2800Zoom/6800Zoom/6900Zoom/S5700
		Dell Axim X3/X5, Tomtom Mobile Bluetooth GPS
	DC5.5	
Dell	X	Dell X30/X50/X50v
	Axim	Axim X30
Dopod	696	Dopod PDA 686 /696 /699 /D700 /CU928 /535 /515 /SX66, O2 XDA II
DoCoMo/FOMA	VGS	
DoCoMa/Vodafone	TU-KA	
HP IPAQ	PDA	HW6510/HX2190/HX2790/HW6910/HW6915/HW6920/HW6825/HW6945/HX2115/HX2490/HX2495 iPAQ H3970 /Mio Mitec 168 PDA /V35 PDA
Apple	IPOD	iPod 3rd, 4th and 5th Generation; iPod Mini, iPod Nano, iPod Photo, iPod Video
LG	Chocolate	KG-800 /VX-8500 /KG90, Shine U970 /KE970 /EnV9900 /VX9900 /Prada KE850 /enV /KU970
	VX10	V111 /VX1 /VX10 /VX2000 /VX3100 /VX3100A /VX4400 /VX4400B /1010 /4NE1

	VX8300	Migo /VX3300/VX3400/VX3450/VX4650/VX4700/VX5200/VX5300/VX6100/VX7000/VX8000/VX8100/VX8300
		AX245 /AX355 /AX390 /AX4270 /AX4650 /AX4750 /AX490 /AX5000
		VX9800 /UX5000 /UX4750 /UX210 /UX245 /UX355 /UX399 /MM535 /PM325 /FUSIC /LX325 /LX350
	VX6000	Digital Camera: Samsung i70 /NV3
		VX4500 / VX4600 /VX6000 /1200 /L1200 /C930 /LX5450 /LX5550 /VI5225
	8080	1400 /1400C /4020 /CU400 /B2000 /B2050 /B2100 /CG300 /CG225
C1100/C1300/C1500/C2000/C3300/C3310/C3320/CE500/8080/6260/SC9288/SC9388/8180/7020/U880/U970		
Micro USB	MicroUSB	LG KE500 /Sumsung SGH-U600 /Sanso S1
		Motorola V6c / Moto Q /RAZR2 V8/V9/V9M Bluetooth H800
		Nokia 8600 Luna /7900 Prism/6500/E90
Motorola (mini USB)	V3	RAZR Series, L2/ L6/L6g/SLVR L7/M300, KRZR K1m, A1200/A668/A70/A732/A780/C305/C362/V235, PEBL
		E680/E680I/U6/V360/C362/C305/C363/V320/V191/E2/MotorolaQ/E770v
		ROKR Z6 / Maxx V6 /Maxx Ve /RIZR V3
		Road Ranger Navigator 7000, Garmin Forerunner GPS
		RIM Blackberry Full series, Skype Netgear SPH101
		Tom Tom One XL GPS
		HP iPAQ 6818 /6828 /4540 /4545 /5765
		Benq P50 /Mitac Mio A700 /A701 /C210 /C310 /C710 /P350 /P550
		Motorola Bluetooth H3 /H350 /H500 /H650 /H700 /RAZRWIRE Mercury/Gray /Pewter/Black Iridium
Mio Digi Walker 168/268/269/269+/336BT/336g/336i/339/8390//8870/A201/A701/C510E/C710/P350/P550		
Motorola	V6	ROKR E1/E2, iM1000, 388C/A1000/A630/A760/A830/A835/A840/A845/A860/A920/A925/C331/C332/C333/C341
		C343/V500/V547 /HOLLYWOOD E815 /V545 /V620
		Motorola Bluetooth HF800 /HF820 /HS805 /HS810 /HS820 /HS850
	i205	i205/i215//i265/i275/i285/i305/i315/i325//i325is/i335/i355/i415/i455/i530/i560/i580/i605/i615/i670/i690/i710
		i730/i733/i736/i760/i830/i833/i835/i836/i850/i855/i860/i870/i875/i880/i885/i920/i930/ic902
	V998	V50 /V998 /V8160

	W220	Motorola V220/220i/MPx220
		Motorola C115/C116/C117/C118/C136/C137/C139/C155/C168/C193/C195/C200/C201/C202/C205/C257/C261
Nintendo	DS	Nintendo DS, Gameboy Advanced SP
	DS Lite	Nintendo DC Lite gameboy
O2	XDA	O2 XDA and Xphone PDA Series, Sprint PDA PPC-6700, Vodafone V1640/V2140/VPA
		QTek series PDA, VPA Compact, SPV C500/M500
		HTC Artemis P3300 /MteoR /Excalibur s620 /Hermes 100 /200 /300 /Trinity P3600 /TyTN
		i-Mate Jam /JASJAM /JASJAR /K-JAM /SP3 /SP3i /SP5 /SP5m
		UTStarcom XV6700 MDA Compact /
		Verizon XV-6700 /Orange M3100
		Gamin Nuvi GPS /Forerunner 205/305/310/350/360/370/660/670/680
		Dopod PDA 565/575/585/818/828/838/900, Orange SPV PDA series,
Palm/Tungsten	i705	Palm i705/M120/M130/M500/M510/M515
		Tungsten C /T /T2 /T3 /W /Zire 71
	300	Palmone/Treo 300/600
	E2	TX /Treo 650/680/700p/700w/700wx /750 /Tungsten E2 /T5 /LifeDrive
Panasonic	D92	MX6/MX7/SA6/SA7/VS2/VS3/VS6/VS7
		Sharp 550SH/770SH/902/903/703/GX15/17/25/30/30i /GX70
		NEC E228/E313/E540/E606/E616/E616V/E808N/E808S/E808Y
	D95	
Philips	929	Savvy DB
Vodafone/Sagem	VS3	
	VS1	Sagem myX-1 /myX1-2 /myX-2 /myX2-2 /myZ /myV-56 /myX-5 /VS1
Samsung	A288	D600/A900/E330N/E350/E370/MM-5600/A210/A310/A399/A475/A505/A509/A530/A539/A640/A561/A563
		A564/A570/A591/A592/A610/A650/A670/A720/A790/A795/A809/A890/D500/D100/D307/D347/D357/D407/D410
		E730/M500/E100/E105/E315/E316/E317/E330N/E335/E400/E630/E635/E700/E715/E770/K258/N200/N288/N400

		N500/N620/N625/N626/N628/N635/P107/P207/P408/P735/Q200/Q208/Q300/R200/R208/R210/R220/R225/R225M
		S307/T100/T108/T200/T208/T209/T309/T319/T400/T408/T410/T500/T609/T619/T709/T719/V200/V205/V206
		X199/X209/X219/X309/X319/X359/A200/A288/A300/A308/A400/A408/A500/A608/A800/C100/C120/C207/C225
		C417/D415/D500/D500C/D508/D600/X640/E530/E568/X450/E360/P200
	E900	E900/E870/X820/D800/D807/D820/D830/P300/D520/Z560/Z400/Z510/Z510i/Trace/T509/T519/T629/T809/U420
		D900/Z510/D828/D838/D848/D908/D528/D808/V900/Z540/Z710/ZV40/E570 /A707 /E250 /i320/i328/D840
	A990	A630/A645/A870/A930/A955/A990/A850/A950/A970/A890/A790/A650/A670/N330
	Z500	Z500/Z130/Z140/Z300/E720/E810/E818/D720
	G600	SGH-E210/F200/F210/M300/M305/M510/M520/Beat SGH-T539/T429/T439/T639/T409/I617/T729/R500/U470
		A513/A516/A737/A747/M210, SCH-R210/R410/R610, SGH-A117/A127/A226/A517/L768/L760/G608/G600/U700/U900
	A110	SPH-A100 /A110/A120 /A200/ A150
Siemens	A31	A31/AF51/C81/EF-81/EL71/S68
	C25	C25/X25/C35/C45/3518/6618/C2588/3518/3618/3508/3568/6688/2118/M35/M50/ME45/MT50
		S35/S45/SL42/A35/A36/A45/A10/SL50/SL45/S25/S35/S45/2508/A50
	C55	C55//C56/C62/C65/C75/A51/A55/A56/A52/A70/A75/C46/M45/M65/M75/MC60/S56/S66/S57/S75/SL55/SL56
		SX1-4/2128/SC55/AX72/AX75/CF110/CF62/CF75/CFX65/CL70/CL75/CT56/CT66/CX65/CX70/CX75/ME75
	SF65/SK65/SL75/SP65/SXG75/A65 (Don't support Temporarily)	
Sony	Clie	Clie PEG Full Series
SONY DC1	DC1	Cybershot FX77 /T1 /T11 /T3 /T33
Sony DV1	DV1	Cyber-shot DSC-H1/H2/H5/M2/S40/S500/S600/T10/T30/T50/T7/W100/W30/W40/W5/W50/W7/W70
		DSC-F88/L1/N1/N2/P10/P100/P12/P150/P200/P32/P41/P43/P52/P72/P73/P8/P92/P93/S60/S90/T5/T9/V1/V3
		DSC-W1/P120
Sony DV2 (8.4V)	DV2	CCD-TR3300/TR516/TR716/TR76/TR818/TR910/TRV118/TRV128/TRV318/TRV328/TRV36/TRV41/TRV43
		CCD-TRV46/TRV51/TRV57/TRV58/TRV66/TRV67/TRV68/TRV81/TRV87/TRV88/TRV98
		CD Mavica MVC-CD200/CD250/CD300/CD350/CD400/CD500
		Cyber-shot DSC-F707/717/828/R1/S70/S75/S85

		DCR-TRV210/TRV340/TRV350/TRV360/TRV460/TRV510/TRV520/TRV525
		FD Mavica MVC-FD100/FD200/FD97
		Handycam CCD-TR315/TR416/TR618/TR917/TR940/TR97/TRV107/TRV108/TRV138/TRV15/TRV16/TRV17
		Handycam CCD-TRV215/TRV25/TRV308/TRV315/TRV338/TRV35/TRV37/TRV408/TRV49/TRV608/TRV615
		Handycam CCD-TRV63/TRV65/TRV715/TRV75/TRV78/TRV815/TRV85/TRV93/TRV95/TRV99
		Handycam DCR-DVD100/DVD101/DVD200/DVD201/DVD300/DVD301/
		Handycam DCR-PC100/PC101/PC105/PC110/PC115/PC120BT/PC330/PC9/TR7000
		Handycam DCR-VX1000/VX2000/VX2100/VX700, Handycam HDR-FX1/HC1, Mavica MVC-CD1000
		Handycam DCR-TRV Series
Sony DV3	DV3	
Sony DV4	DV4	Handycam DCR-DVD103/DVD105/DVD203/DVD205/DVD305/DVD403/DVD405/DVD505/DVD602/DVD605
		Handycam DCR-DVD653/DVD7/DVD703/DVD705/DVD755/DVD803/DVD92
		Handycam DCR-HC1000/HC20/HC21/HC26/HC30/HC32/HC36/HC40/HC42/HC46/HC65/HC85/HC90/HC96
		Handycam DCR-IP1/IP220/IP45/IP5/IP55/IP7BT/PC1000/PC109/PC350/PC55
		Handycam DCR-SR100, Handycam HDR-HC3
Sony Ericsson	K750i	W series, J100/K750/K800//M600/P990/Z520/Z610i/Z710
		Headset HBH-GV435
	T28	J200/J300/K300/K500/K600/K700/P800/P910/Z1010/Z200/Z300/Z500/Z600/Z800/V600i
		T series, R Series, S Series
USB (standard)		
USB for iPod		IPOD Shuffle (Old)